


VAPORTEK® Optimum 4000™ Instructions For Use

Fig. 1



Turn off machine. Lift off cartridge lid & discard clear film liner. Cartridge life is rated at 3-4 months.

Fig. 2

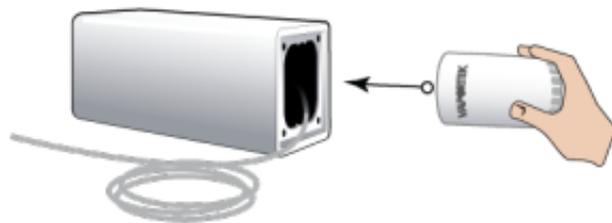


Insert open end of cartridge into back of machine, seating firmly against internal gasket.

Fig. 3



Replace spring-loaded rear cover plate by pressing it against the cartridge while turning until it locks into place.

Fig. 4

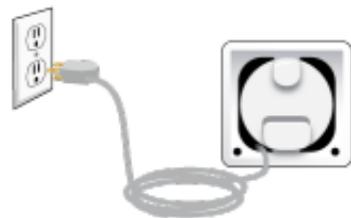


To operate, plug cord into power outlet. Always unplug Optimum before removing cartridge. The cord can be coiled for storage in the back of the rear cover plate.

Fig. 5



Rotate the dial face to control dry vapor output and intensity using 1 for the lightest output & 10 for the strongest.

This unit delivers odor-neutralizing and aromatic dry vapor for permanent odor control. **It does not produce ozone, hydroxyl, or any added moisture. This product is safe to use in occupied spaces. For use instructions, safety guidelines, and cartridge best practices, please visit us online.**

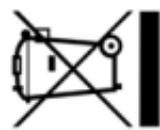

FOR USE & OPERATION MANUAL VISIT
WWW.VAPORTEK.COM

For maximum performance, replace cartridge after 3-4 months of use.

230 Volts
50/60 Hertz
10/8 Watts

11-6005C